

CONTROLS

DUMP LATCH:

To dump the tub, grasp the dump handle and lift the dump latch, then rotate the tub to discharge the mix.

After, discharge, return the tub to the vertical mixing position.

The paddle shaft and mixing blades are engaged and disengaged by tightening and loosening the drive belts with a spring loaded idler pulley.

To engage the clutch, rotate the lever counterclockwise.

The spring maintains the correct belt tension.

To disengage the clutch, rotate the lever clockwise against the lever stop.

The engine base is slotted to adjust for belt wear and to bring the idler pulley into operating range.

CAUTION:

Stop the engine before allowing anybody to put their hands in the mixing drum.