

1. Using the knurled screws, Install the jaws on the block so they are the proper distance apart for the pulley to be pulled. Leave the screws loose.
2. Place the jaws in the groove at the pulley hub, then tighten the knurled screws.
3. While holding the puller in place, turn the driver screw clockwise until its tip contacts the shaft of the alternator or pump.
4. Continue turning the drive screw until the pulley is removed.